 


PURE-HYPR AUDIO
SS-100
USER MANUAL

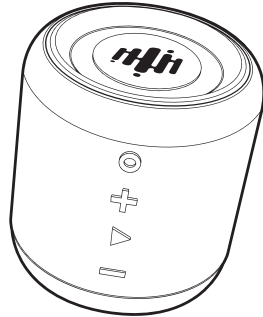

10W Bluetooth wireless speaker

⚙️ **Product Specification**

Weather Resistant
Bluetooth 5.0
Waterproof rated to IPX6
3.5mm Audio Jack
FM Tuner
Rechargeable 1800 mAh Lithium Ion Battery
10 watts total power (5W*2)

⚙️ **Included**


- 1| 1 USB to USB C charging cable rated to 5V/500mA-1A
- 2| User Manual

⚙️ **Bluetooth Connection**

To connect the speaker to a compatible Bluetooth device, turn on the Bluetooth of the device (smartphone, tablet, etc), then search for the compatible device. Find this speaker and pair with it. Enter the password "0000" if you need a password for pairing. Once paired and connected, all audio from the device will now play over the SS-100 Speaker.

01

 
⚙️ **Warnings**

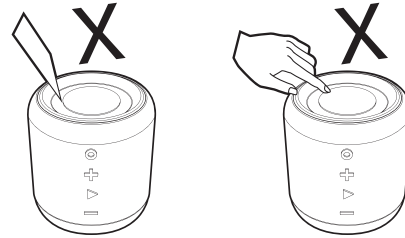

Warnings:
Keep away from products sensitive to magnetic items (because it is magnetic).
DO NOT EXPOSE TO FIRE OR HIGH TEMPERATURES.


02

 ⚙️ **Buttons**

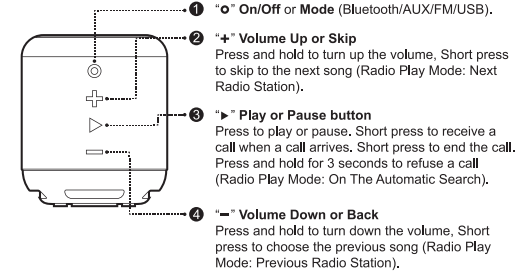


03

 ⚙️ **Ports and Indicator**

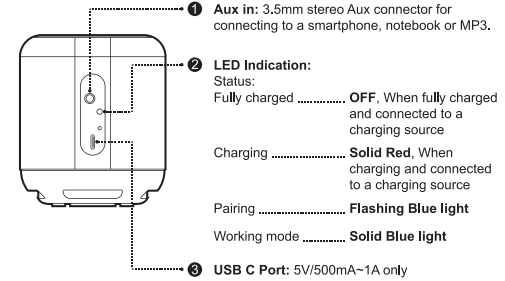

04

 ⚙️ **Bottom**

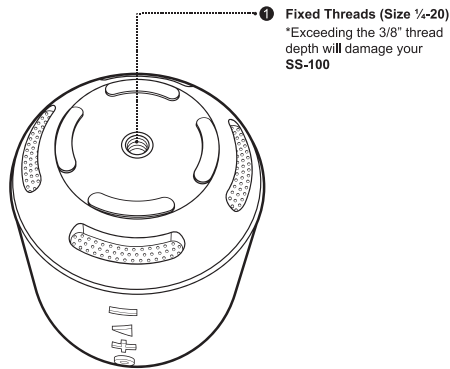

05

⚙️ **Operating Instructions**

- 1 **Bluetooth.** Press and hold the power "ON/OFF" for 3 seconds to select "Bluetooth Mode". From the Bluetooth menu of your mobile device, select SS-100. Grant the permission to share on your mobile device to the SS-100. All Audio from your mobile device will now play to the SS-100 Speaker.
- 2 **Speakerphone.** Button functions in Bluetooth mode. Press "▶" button to answer an incoming call. Press "▶" button during the call to end it.
- 3 **Radio play mode.** Press the "o" button to change the mode to FM mode. Press and hold the "▶" for 3 seconds to Automatic Search. Press "+" or "-" Next Radio Station and Previous Radio Station. Press "▶" once a station is found to lock allowing "+" and "-" buttons to change volume.
- 4 **AUX input mode.** 3.5mm audio cable into the Speaker, the SS-100 will automatically switch to line in play mode.

06

5 **TWS (True Wireless Stereo)**



You can connect 2 speakers at the same time with your mobile

- 1 Disconnect or disable the bluetooth connection from all other devices before pairing with another SS-100
- 2 Turn on the two speakers and connect both through Bluetooth. Press and hold the "▶" button so that the speakers are paired automatically. After matching, the indicator light of one of the speakers will turn on.
- 3 Now please turn on the Bluetooth function of your mobile device, you will find the "SS-100". Please connect it and from this moment you can play music via the true wireless function.
- 4 Disconnect the true wireless, by pressing and holding the "▶" button for 3 seconds.

07

⚙️ **Troubleshooting**

Don't attempt to repair the speaker to prevent electric shock or further damaging it. Please refer to the following solutions if you have a problem as follows:

- 1] No Sound from the speaker?
 - 1] Check whether the speaker is on.
 - 2] Confirm the SS-100 is connected via bluetooth to the selected device.
 - 3] Confirm the SS-100 is in range of the selected bluetooth device.
- 2] What to do when it has distortion of sound at the high volume.
 - 1] Confirm that the battery has sufficient charge
 - 2] Move the SS-100 closer to the paired bluetooth device.
 - 3] (If in use) Confirm the 2.5 Aux input line is not loose or damaged.

Safety regulations.

- 1] Read and observe the safety regulations first.
- 2] Any cut surface, uneven surface, metal parts or accessories may cause injury. Please be careful with use.

08

- 3] The speaker is not a toy and is not edible. Keep out of reach of small children.
- 4] Do not refit, replace or disassemble any portion of this device. Incorrect handling may result in a short circuit, product damage and possibly even fire.
- 5] Disassembled, damaged or modified product will not be covered under any warranty claim.
- 6] Do not use any chemicals or high pressure to clean the product.
- 7] Constant full volume can place undue strain, reducing the lifecycle of the speaker components.
- 8] Do not drop, stack or use mechanical pressure on any portion of this device.
- 9] This device may cause disturbance on other sensitive electronic devices nearby.
- 10] Stop using at once if any abnormal symptoms occur while in use.
- 11] DO NOT EXPOSE TO FIRE OR HIGH TEMPERATURES.

09